


## Seating Tool Kit; PN 2215061-[ ] (-4 Shown)

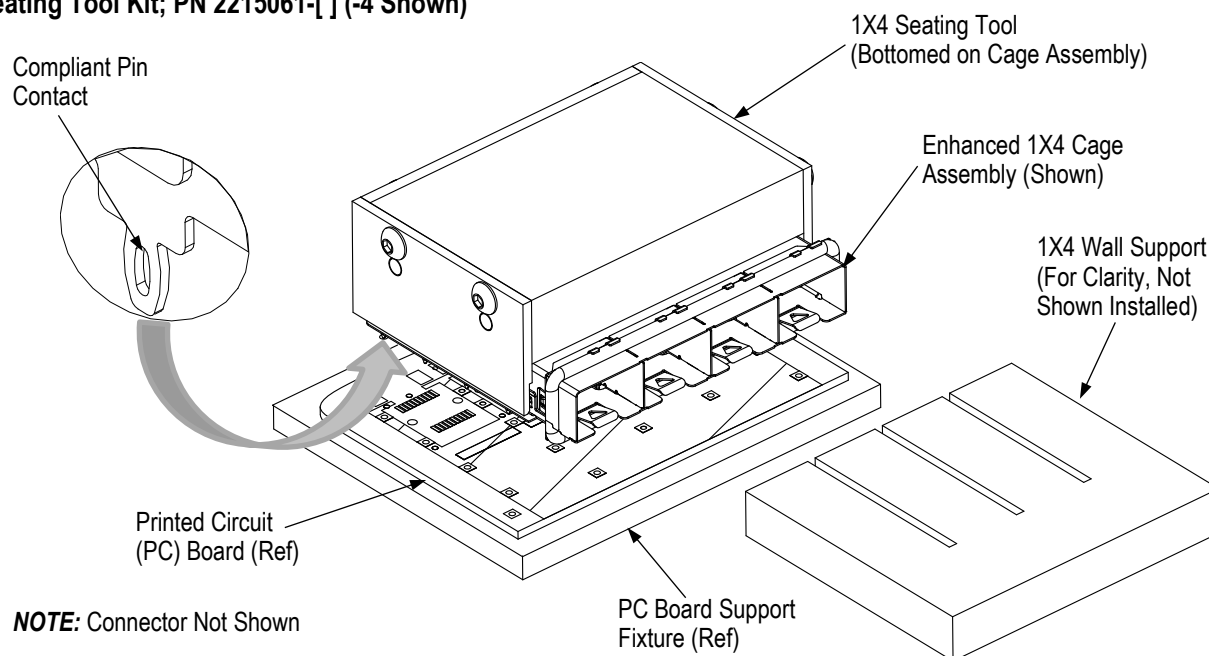

Seating Tool Kit Part Number	zSFP+ Cage Assy Configuration	Cage Assy Part Number	Application Specification
2215061-1	1X1	----	<a href="#">114-13120</a>
2215061-2	1X2	2198720-1, 2227728-1	
2215061-3	1X3	----	
2215061-4	1X4	2198722-1, 2227730-1	
2215061-5	1X5	2287420-1, 2287433-1	
2215061-6	1X6	2198724-1, 2227732-1	
2215061-7	1X6	2318085-1	
2215061-8	1X8	2315453-1	

Figure 1

## 1. INTRODUCTION

The zSFP+ surface mount PT connector and cage assembly seating tool kits listed in Figure 1 are used to seat the cage assemblies described in Figure 1 onto the pc board. The cage assembly contains compliant pin contacts to allow solderless pc board installation. The seating tool is not designed to seat the connector.

Read these instructions thoroughly before using the seating tool kit.



### NOTE

Dimensions on this sheet are in metric units [with U.S. customary units in brackets]. Figures and illustrations are for reference only and are not drawn to scale.

## 2. DESCRIPTION (FIGURE 1)

Each seating tool kit consists of a seating tool and a wall support. The seating tool and wall support are also available separately. The seating tool has cutouts (two located on each side) to accept the protruding part of the standoffs of the cage assembly. The wall support must be installed into the ports of the cage assembly.

The top of the seating tool provides a surface to accept the force applied by the application tool to seat the product onto the pc board. During seating, the back and sides of the seating tool protect the cage assembly from damage. The wall support provides rigidity to the individual ports of the cage assembly.

### 3. REQUIREMENTS

#### 3.1. PC Board Support Fixture (CUSTOMER SUPPLIED)

A pc board support must be used to provide proper support for the pc board and to protect the pc board and the connector and cage assembly from damage. The support fixture must be designed for specific needs using the following recommendations:

- It should be at least 25.4 mm [1 in.] longer and wider than the pc board
- It should have flat surfaces with holes or a channel large enough and deep enough to receive any protruding components of the product

#### 3.2. Application Tool

Power for seating tools must be provided by an application tool (with a ram) capable of supplying a downward force of 44.5 N [10 lb-force] per contact. For available application tools, call PRODUCT INFORMATION at the number listed at the bottom of page 1.



#### CAUTION

Over-driving of the cage assembly will deform parts critical to the quality of the connection. Maximum force occurs prior to the cage assembly bottoming on the pc board.

### 4. SETUP

When setting up equipment to seat the cage assembly, pay particular attention to the following:

- The seating tool must be matched to the cage assembly



#### CAUTION

If the seating tool and cage assembly are mismatched or are improperly aligned, damage could occur to the tooling, cage assembly, or both.

- Light pipes MUST NOT be assembled onto the cage assembly
- The wall support must be properly installed, and the seating tool, cage assembly, and application tool ram must be properly aligned before cycling the application tool

1. Set the tool seating height to the dimension shown in Figure 2 (application tool shut height will equal the tool seating height PLUS the combined thicknesses of the pc board and support fixture).

After seating, a gap of no more than 0.10 mm [.004 in.] between the cage assembly standoffs and the pc board is allowed.

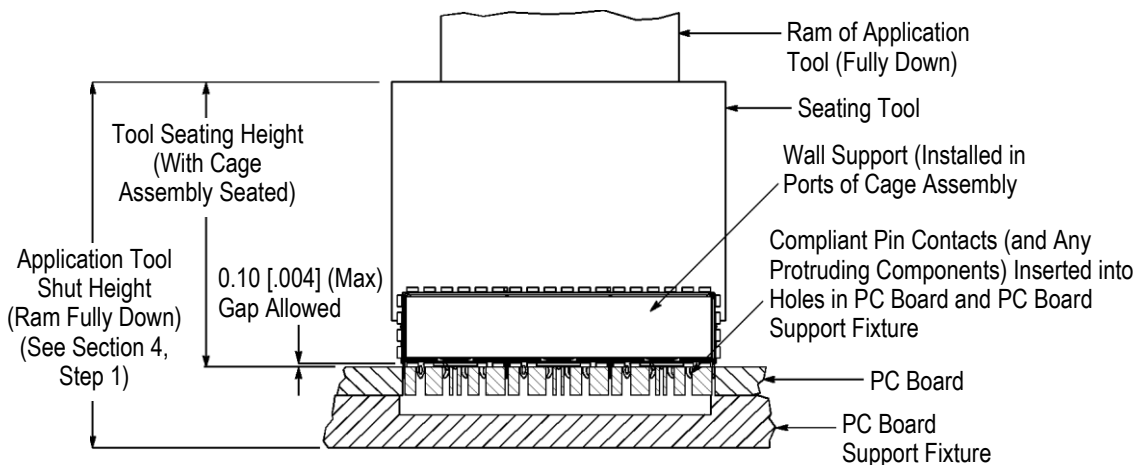


Figure 2



#### NOTE

Use the tool seating height as a reference starting point. This height may need to be adjusted to obtain the amount allowed (maximum of 0.10 mm [.004 in.]) between the standoffs of the cage assembly and the pc board.

2. Slide the wall support into the ports of the cage assembly until the wall support is secure.

## 5. SEATING (FIGURE 2)



### NOTE

The connector must be mounted on the pc board **BEFORE** seating the cage assembly.

1. Place the pc board on the support fixture.
2. Orient the seating tool over the cage assembly so the back is aligned with the back of the cage assembly. Lower the seating tool onto the cage assembly, making sure the cutouts slide over the protruding components of the cage assembly, until the seating tool bottoms on the top of the cage assembly.
3. Place the cage assembly on the pc board so the contacts and alignment posts are aligned and started into the matching holes in the pc board.
4. Center the seating tool (with the cage assembly) under the ram of the application tool. Slowly lower the ram until it just meets the seating tool. Verify alignment of pc board support, pc board, cage assembly, and seating tool.



### CAUTION

Damage to the pc board, seating tool, or cage assembly may occur if the seating tool is not properly seated on the cage assembly before cycling the application tool.

5. Cycle the application tool to seat the cage assembly on the pc board. Retract the ram, and carefully remove the seating tool by pulling it straight from the cage assembly.
6. Check the cage assembly for proper seating according to the following:
  - a. The widest section of each compliant pin is inside its intended pc board hole
  - b. Each alignment post is in its intended pc board hole
  - c. If present, the gap between the standoffs and the pc board is no more than 0.10 mm [.004 in.]



### NOTE

For detailed application requirements of the cage assembly, refer to Application Specification 114-13120.

## 6. MAINTENANCE AND INSPECTION

The seating tool kit is assembled and inspected before shipment. It is recommended that the seating tool kit be inspected immediately upon arrival at the facility of use to verify that it has not been damaged during shipment, and that it conforms to the dimensions provided in Figure 3.

### 6.1. Daily Maintenance

It is recommended that each operator be made aware of, and responsible for, the following steps of daily maintenance:

1. Remove dust, moisture, and contaminants with a clean, soft brush or a lint-free cloth. DO NOT use objects that could damage the components.
2. When the seating tool and wall support are not in use, store them in a clean, dry area.

### 6.2. Periodic Inspection

Regular inspections should be performed by quality control personnel. A record of scheduled inspections should remain with the seating tool or be supplied to personnel responsible for kit. Inspection frequency should be based on amount of use, working conditions, operator training and skill, and established standards.

## 7. REPLACEMENT AND REPAIR


Customer-replaceable parts are listed in Figure 3. A complete inventory should be stocked and controlled to prevent lost time when replacement of parts is necessary. Parts other than those listed should be replaced by TE Connectivity to ensure quality and reliability. Order replacement parts through your TE representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:

CUSTOMER SERVICE (038-035)  
TE CONNECTIVITY CORPORATION  
PO BOX 3608  
HARRISBURG PA 17105-3608

## 8. REVISION SUMMARY

Added Seating Tool Kit PN 2215061-8

### Seating Tool; PN 2215061-[ ] (1X4 Shown)

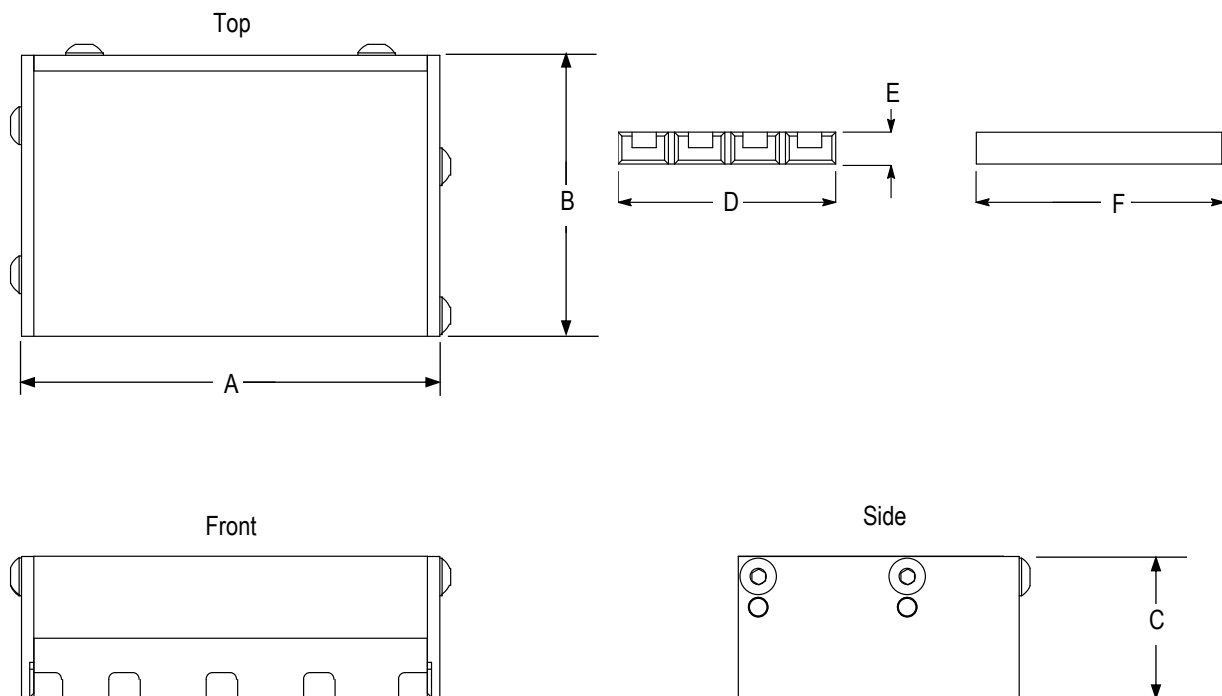

Seating Tool Kit Part Number	Cage Assy Configuration	Dimension					
		A	B	C	D	E	F
2215061-1	1X1	18.00 [.709]	41.10 [1.618]	21.00 [.827]	13.64 [.537]	8.45 [.330]	50.8 [2.00]
2215061-2	1X2	32.70 [1.287]			27.94 [1.100]		
2215061-3	1X3	47.00 [1.850]			42.16 [1.660]		
2215061-4	1X4	61.20 [2.409]			56.39 [2.220]		
2215061-5	1X5	75.40 [2.968]			70.66 [2.782]		
2215061-6	1X6	88.90 [3.500]			84.33 [3.320]		
2215061-7	1X6	89.70 [3.531]		26.00 [1.024]	113.05 [4.45]		
2215061-8	1X8	118.20 [4.654]					

Figure 3