




G	RoHS compliant	Scale	Free				Date	Name	Description: Modular Connector		
		TOLERANCE					Drawn	16.06.2021	Luca	RJ45 / CAT7 / Male / FTP	
H	Unit:mm	X.X	±0.20				Approved	08.09.2023	Segal	ASSMANN WSW-No.	
		X.XX	±0.10							A-MJP-8-EG-LIB-S3	
		X.XXX	±0.05	②	Update the dimension in page 2	08.09.2023	Segal				
		DIM	TOL	①	Add page 5 for package	02.11.2021	Luca			Drawing-No.	ASS 8962 CO
X.°	±2°	③	Drawn	16.06.2021	Luca	Customer-No.				SHEET	1 / 5
		Angle	TOL	Id.	Modification	Date	Name	A company of			

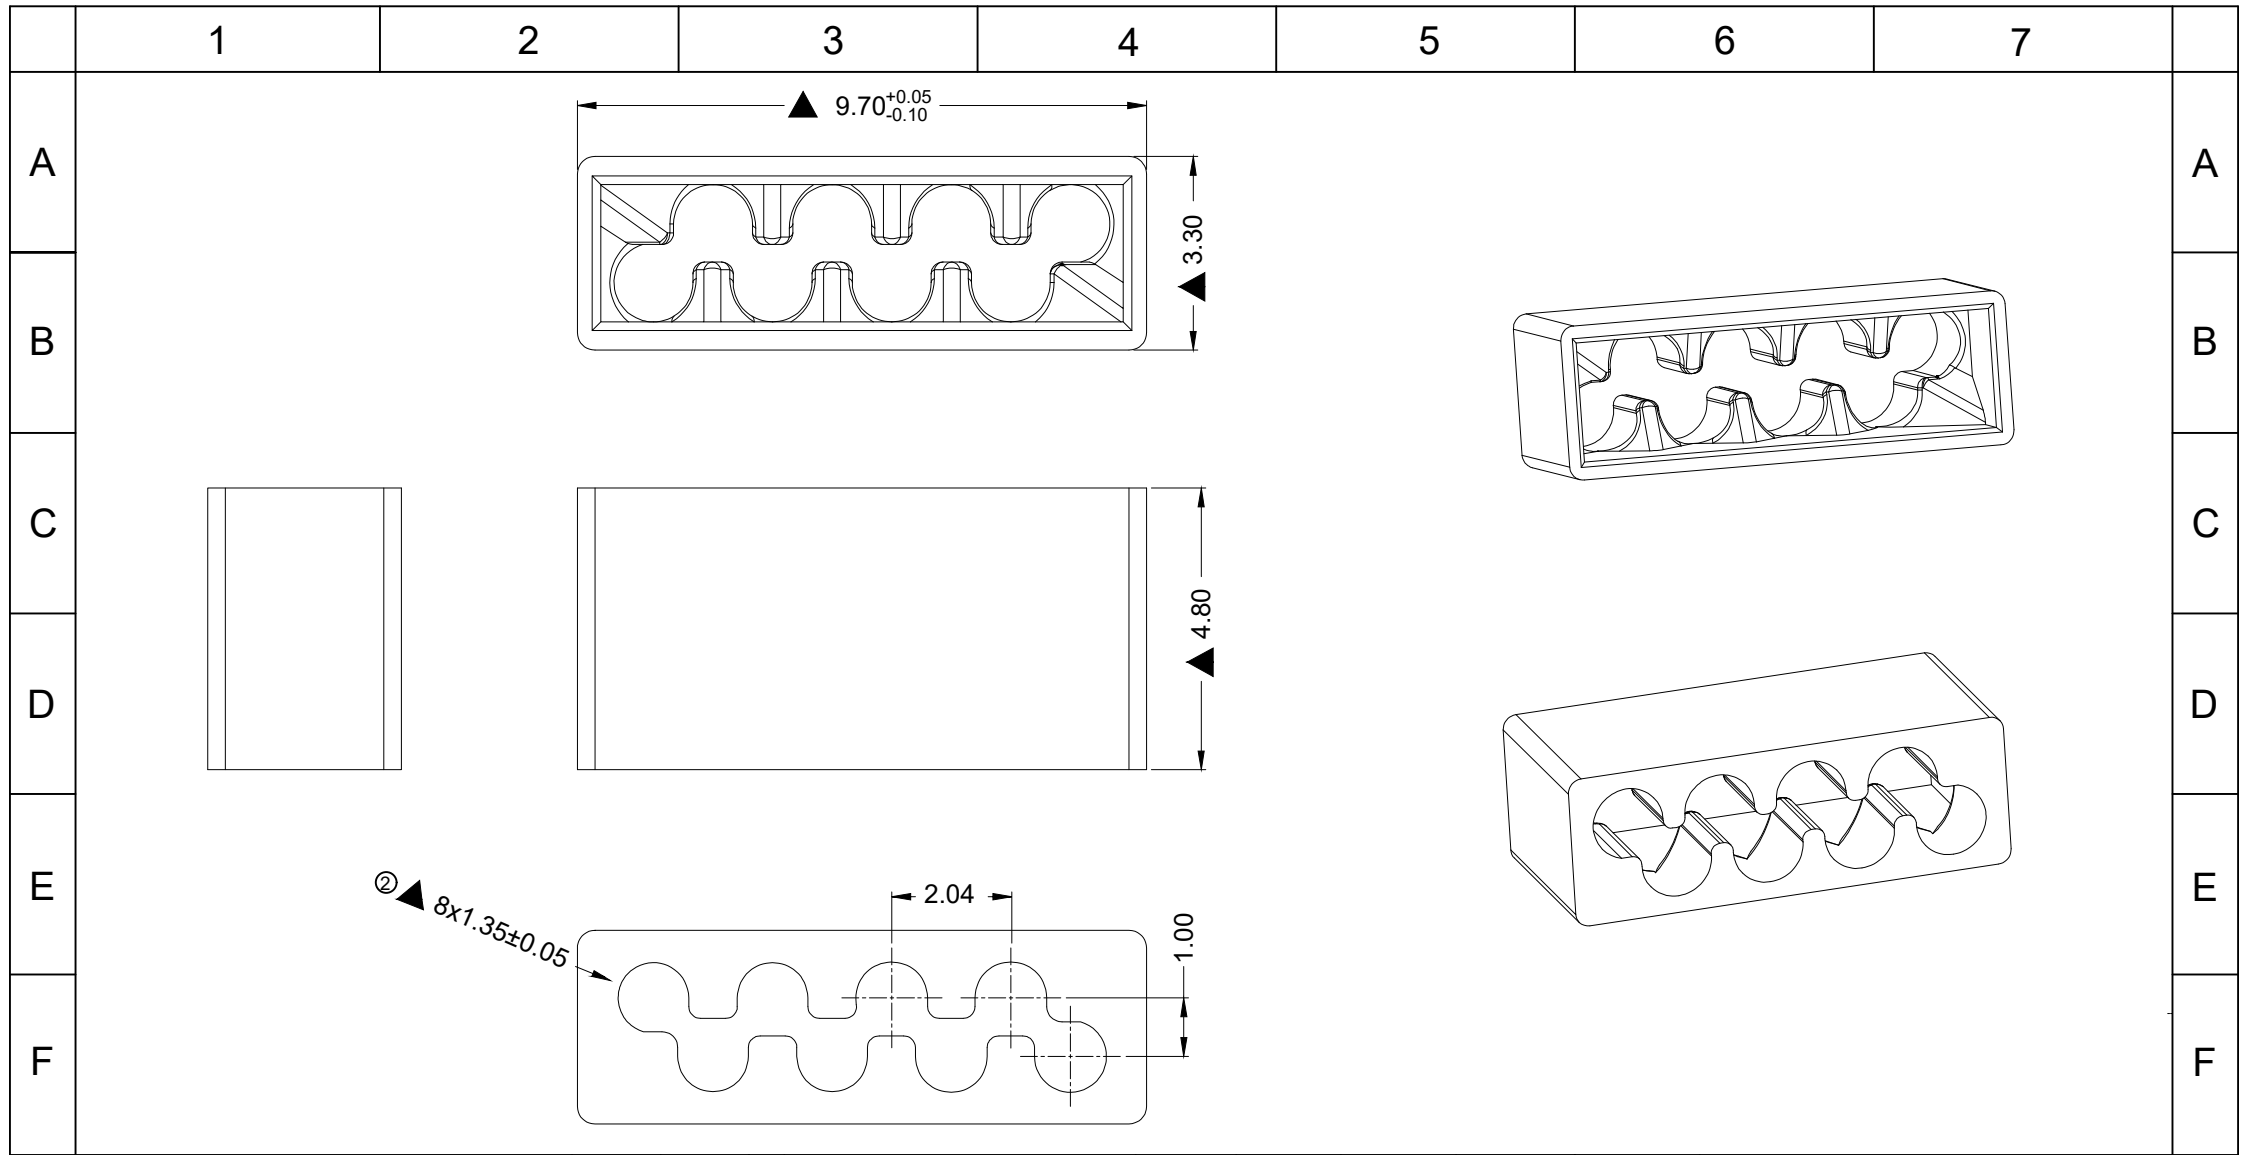

G	RoHS compliant Unit:mm	Scale	Free					Date	Name	Description: Modular Connector			
		TOLERANCE						Drawn	16.06.2021	Luca	RJ45 / CAT7 / Male / FTP		
		X.X	±0.20					Approved	08.09.2023	Segal	ASSMANN WSW-No.		
		X.XX	±0.10								A-MJP-8-EG-LIB-S3		
		X.XXX	±0.05	②	Update the dimension in page 2	08.09.2023	Segal					Drawing-No.	
		DIM	TOL	①	Add page 5 for package	02.11.2021	Luca			ASS 8962 CO		rev02	
		X.°	±2°	③	Drawn	16.06.2021	Luca			Customer-No.		SHEET 2 / 5	
H		Angle	TOL	Id.	Modification	Date	Name						

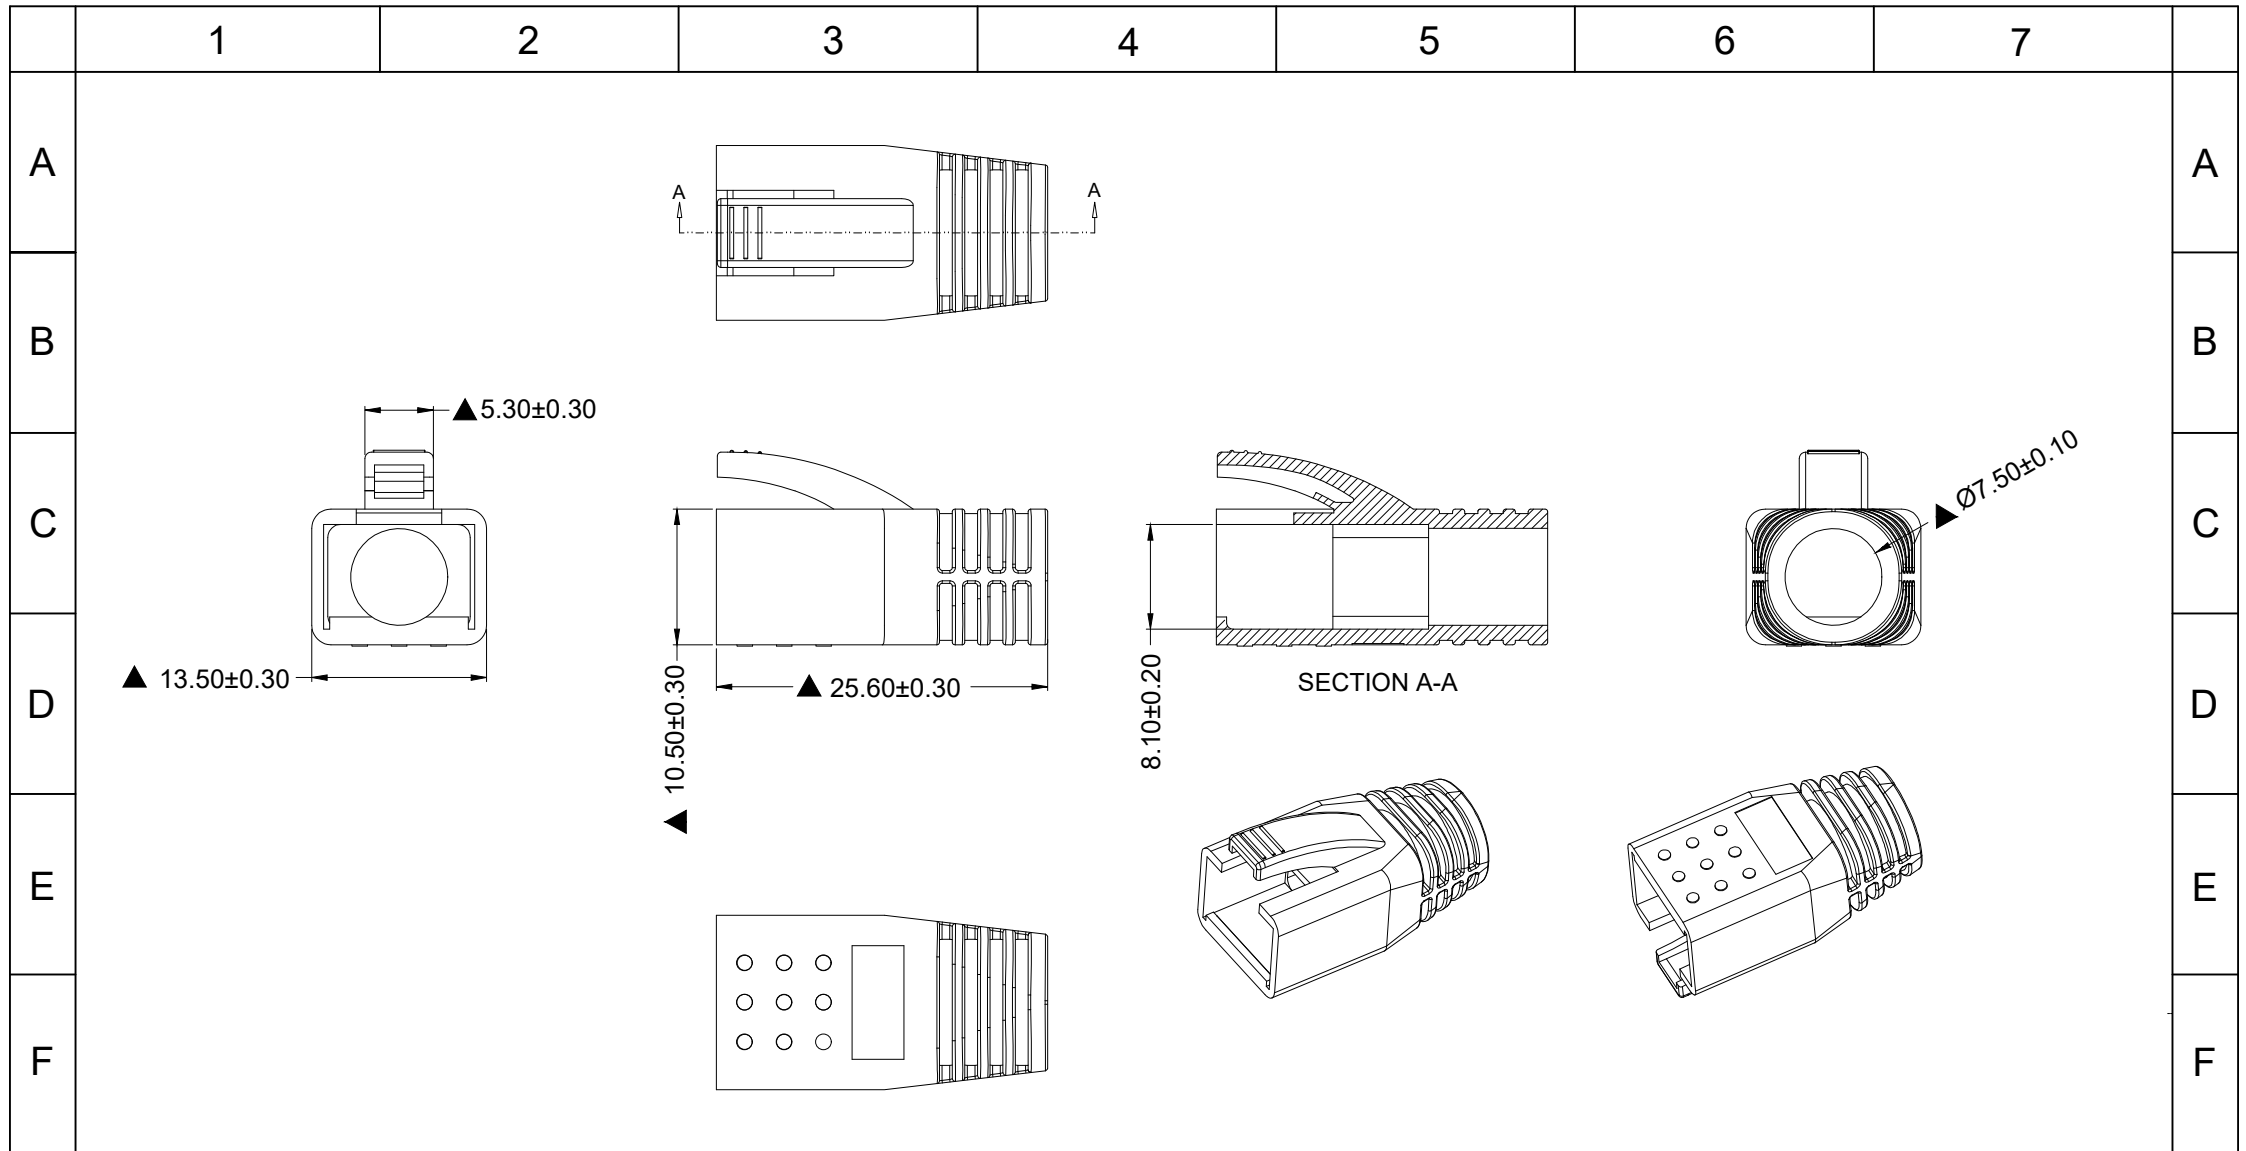

RoHS compliant
Unit:mm

Scale	Free					Date	Name
TOLERANCE						Drawn	Luca
X.X	±0.20					Approved	Segal
X.XX	±0.10						
X.XXX	±0.05	②	Update the dimension in page 2	08.09.2023	Segal		
DIM	TOL	①	Add page 5 for package	02.11.2021	Luca		
X.°	±2°	③	Drawn	16.06.2021	Luca		
Angle	TOL	Id.	Modification	Date	Name		

Description:	Modular Connector
	RJ45 / CAT7 / Male / FTP
ASSMANN WSW-No.	A-MJP-8-EG-LIB-S3
Drawing-No.	ASS 8962 CO
Customer-No.	rev02
	SHEET 3 / 5

1

2

3

4

5

6

7

A

Instruction Manual:

A

B



1.Insert boot into cable.




2.Strip cable jacket 20mm, do not damage the braid.




3.Twist braid into strip.



4.Remove foil paper

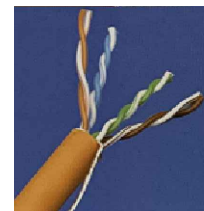

5.Separate 4 pairs, cut the cross frame.

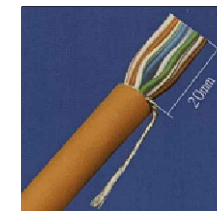


6.Arrange wires according to wire map.

C

C

D


D

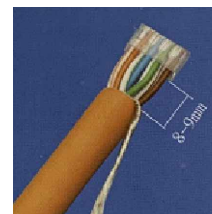


7.Input wires into inner insert, cut the extra wires to flat.




8.Put inner insert to the end of plug.

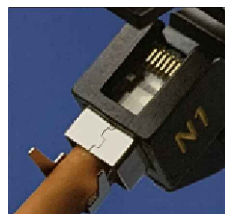

9.Put plug into crimping tool and press.

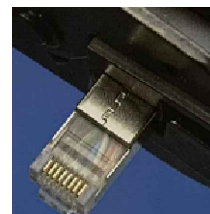

10.Put the tail part into crimping tool and press.

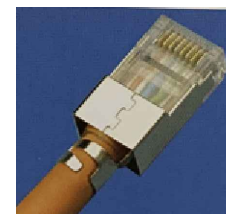

11.After crimping



12.Push the boot upward to connect with the plug.

E

E

F

F

G

G

RoHS compliant

Unit:mm

Scale	Free
TOLERANCE	
X.X	±0.20
X.XX	±0.10
X.XXX	±0.05
DIM	TOL
X.°	±2°
Angle	TOL

②	Update the dimension in page 2	08.09.2023	Segal
①	Add page 5 for package	02.11.2021	Luca
①	Drawn	16.06.2021	Luca
Id.	Modification	Date	Name

Drawn	Date	Name
Approved	Date	Name
		
A company of 		

Description: Modular Connector
RJ45 / CAT7 / Male / FTPASSMANN WSW-No.
A-MJP-8-EG-LIB-S3Drawing-No.
ASS 8962 CO rev02Customer-No.
SHEET 4 / 5

1

2

3

4

5

6

7

H

H

1

2

3

4


5

6


7

Packing:


1. Take 100pcs below clips into a chain bag.

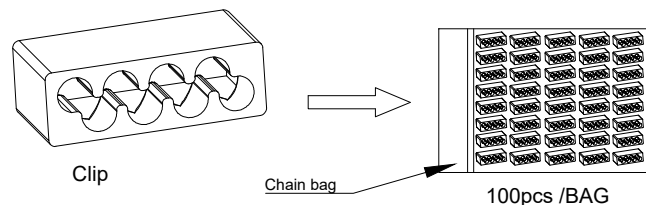


2. Take 100pcs below RJ45 plug into a Tray and stick a label on a corner.

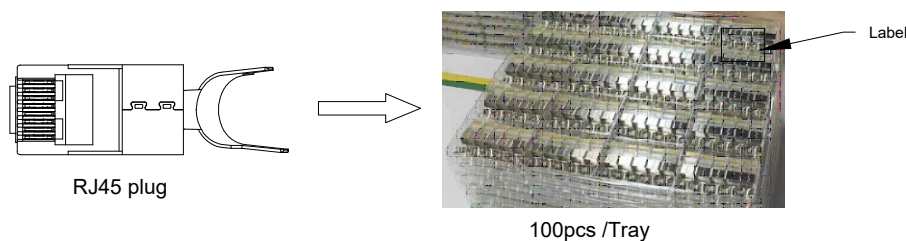


3. Take a bag of clips put on a tray with 100pcs RJ45 plugs.

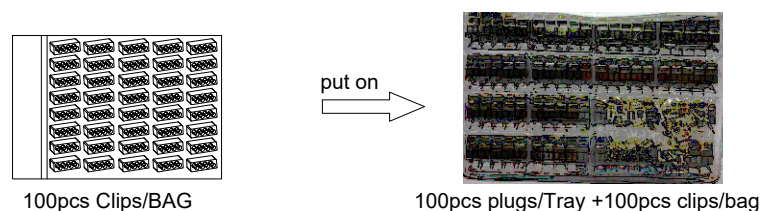

4. Take 35 trays into a carton and stick carton label on the top right corner.

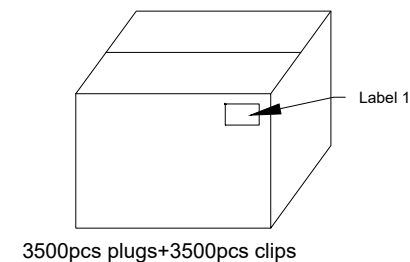

5. Packing the sheath. Put the "+" partition into a carton, then put 4000pcs sheathes into the carton. And stick carton label on the top right corner.

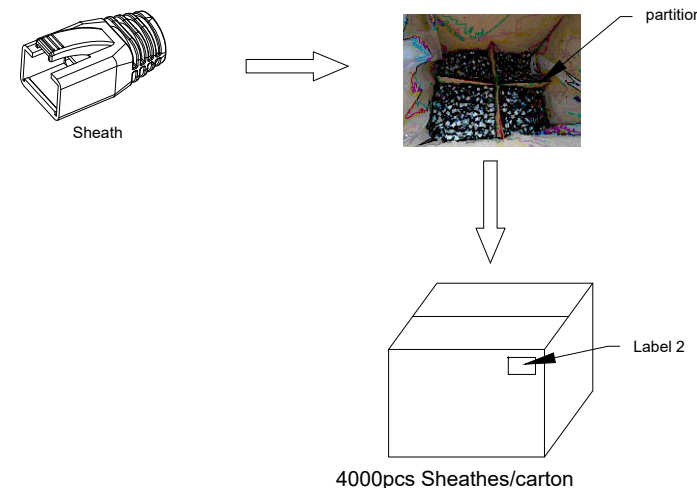

G

RoHS compliant

Unit:mm

Scale Free

TOLERANCE

X.X ±0.20

X.XX ±0.10

X.XXX ±0.05

DIM TOL

X.° ±2°

Angle TOL

②

Update the dimension in page 2

08.09.2023

Segal

①

Add page 5 for package

02.11.2021

Luca

③

Drawn

16.06.2021

Luca

Id.

Modification

Date

Name

Date

Name

Description: Modular Connector
RJ45 / CAT7 / Male / FTP

ASSMANN WSW-No.

A-MJP-8-EG-LIB-S3

Drawing-No.

ASS 8962 CO

rev02

Customer-No.

SHEET
5 / 5

ASSMANN
WSW components
A company of **BS**

1

2

3

4

5

6

7

G

H