


- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18

**MATERIAL**  
Nickel-plated brass.

**FEATURES AND APPLICATIONS**  
GH. nuts can be used for fitting the following indicators to reservoirs with thin walls (thickness smaller than 5 mm):

- HGFT. (see page 1188)
- HGFT-EX (see page 1189)
- GN 743 (see page 1190)
- GN 743.1 (see page 1190)
- GN 743.2 (see page 1191)
- GN 743.3 (see page 1192)
- GN 743.4 (see page 1193)
- GN 743.5 (see page 1193)
- GN 743.6 (see page 1196)
- HGFT-PR (see page 1198)
- HGFT-HT-PR (see page 1198)
- GN 744 (see page 1199)
- HFTX. (see page 1202)
- HFTX-PR (see page 1203)
- HCFE. (see page 1204)
- HCFE-C (see page 1204)
- HCFE-EX (see page 1205)

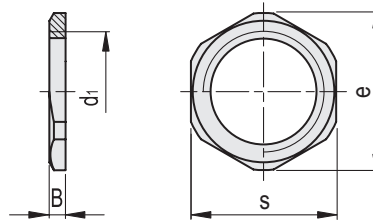

**BSP**

**METRIC**

Code	Description	d1	B	s	e	⚖
14991-NK	GH. 1/4-NK	G 1/4	3	15	16.5	6
15001-NK	GH. 3/8-NK	G 3/8	3	19	21	3
15011-NK	GH. 1/2-NK	G 1/2	4	24	26.5	7
15021-NK	GH. 3/4-NK	G 3/4	4	30	33	12
15031-NK	GH. 1-NK	G 1	4.5	37	40	14
15041-NK	GH. 1 1/4-NK	G 1 1/4	5	46	50.5	19
15051-NK	GH. 2-NK	G 2	6	65	71	40
14861-NK	GH. M12x1.5-NK	M 12x1.5	3	15	16.5	2
14871-NK	GH. M14x1.5-NK	M 14x1.5	3	18	20	2.5
14881-NK	GH. M16x1.5-NK	M 16x1.5	3	19	21	3
14891-NK	GH. M20x1.5-NK	M 20x1.5	3	24	26.5	5
14901-NK	GH. M25x1.5-NK	M 25x1.5	3.5	30	33	8.5
14911-NK	GH. M26x1.5-NK	M 26x1.5	3.5	30	33	8.5
14921-NK	GH. M27x1.5-NK	M 27x1.5	4	32	35	7
14931-NK	GH. M30x1.5-NK	M 30x1.5	4	35	38.5	12
14941-NK	GH. M33x1.5-NK	M 33x1.5	4	41	45	12.5
14951-NK	GH. M35x1.5-NK	M 35x1.5	5	40	44	15.5
14961-NK	GH. M40x1.5-NK	M 40x1.5	4.5	46	50.5	23
14971-NK	GH. M42x1.5-NK	M 42x1.5	5	45	50	17.5
14981-NK	GH. M42x2-NK	M 42x2	5	45	50	18