
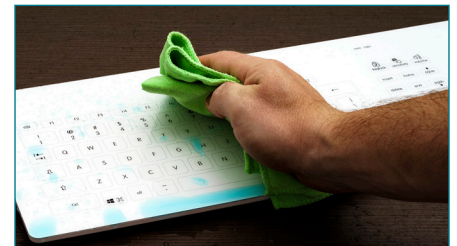


CK4

cleankeys®

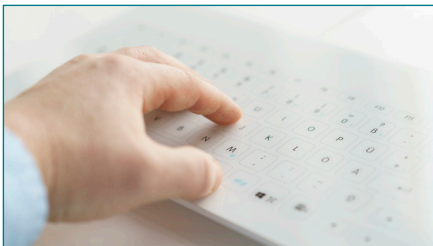

### FEATURES

- Complete flat Gorilla® glass surface
- Excellent hygienic level, because it's washable and disinfectable
- Key lock to disable the keyboard before cleaning
- Full key layout with integrated Touchpad
- Volume and sensitivity are adjustable individually
- Rearside VESA mounting option
- Various designs are possible
- EMC compliant with EN 60601-1-2 Edition 4

### TECHNICAL DATA

Number of keys: 103  
 Housing type: desktop keyboard  
 Enclosure material: plastic  
 Surface material: 0.8 mm Gorilla® glass  
 Switch technology: capacitive  
 Protection level: glass-side IP65  
 Interface: USB (compliant with USB 2.0)  
 Operating temperature: 0 °C to +60 °C  
 Storage temperature: -40 °C to +65 °C  
 Dimensions: 470 x 167 x 25.4 mm  
 System requirements: Win®, MacOS® and Linux® \*

Compliance:  
 -- Europe: CE  
 -- USA/Canada: FCC Part 15 Subpart B  
 -- Global: REACH,  
 RoHS self-declaration  
 Warranty: 4 years on the electrical function

### TECHNICAL DATA TOUCHPAD

Operating principle: capacitive  
 Dimensions: 60 x 42 mm

### ORDER INFORMATION

Cat.No.	Product description	Layout
KR23210	TKR-103-TOUCH-KGEH-VESA-WHITE-USB-DE	German
KR23211	TKR-103-TOUCH-KGEH-VESA-WHITE-USB-US/EU	US/EU English
KR23213	TKR-103-TOUCH-KGEH-VESA-WHITE-USB-FR	French
KR23214	TKR-103-TOUCH-KGEH-VESA-WHITE-USB-CH	Swiss
KR23215	TKR-103-TOUCH-KGEH-VESA-WHITE-USB-SKAN	Scandinavian
KR23217	TKR-103-TOUCH-KGEH-VESA-WHITE-USB-UK	UK English

Other language versions available on request.

\* if OS and Hardware meet the requirements of USB2.0 Compliance

Subject to modifications and errors

GETT Gerätetechnik GmbH

Mittlerer Ring 1 | 08233 Treuen | Germany  
 Tel: +49 37468 660-0  
 Fax: +49 37468 660-66  
 E-Mail: info@gett.de  
 Internet: www.gett.de

Gett North America LLC


E-Mail: info@gett-na.com  
 Internet: www.gett-na.com

Gett Asia Ltd.

E-Mail: info@gett-asia.com  
 Internet: www.gett-asia.com

**gett-group.com**  
**washable-keyboards.com**

### TECHNICAL DRAWING (in mm)

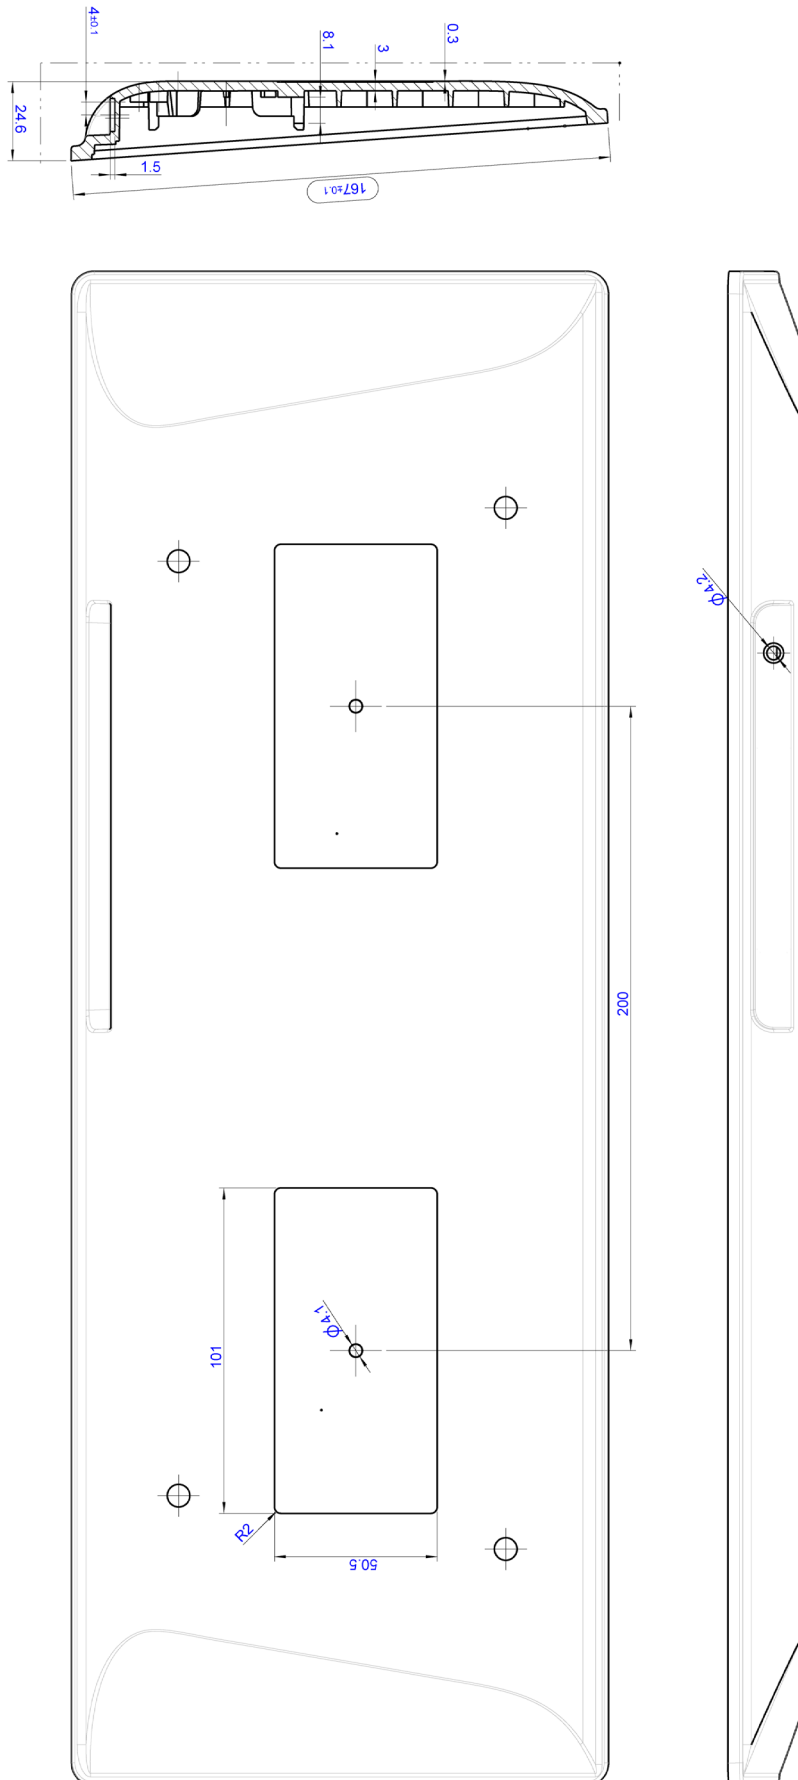

Subject to modifications and errors

GETT Gerätetechnik GmbH

Mittlerer Ring 1 | 08233 Treuen | Germany  
 Tel: +49 37468 660-0  
 Fax: +49 37468 660-66  
 E-Mail: info@gett.de  
 Internet: www.gett.de


Gett North America LLC

E-Mail: info@gett-na.com  
 Internet: www.gett-na.com

Gett Asia Ltd.


E-Mail: info@gett-asia.com  
 Internet: www.gett-asia.com

### KEY FUNCTIONS:

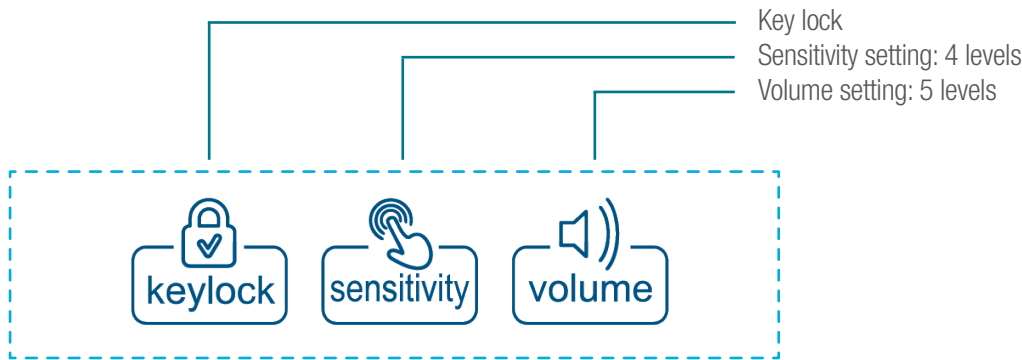


— — — — — LED bar to display the key lock and the settings for sensitivity and volume

The sensitivity can be set as follows (ascending):

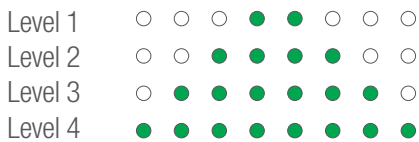

The volume can be set as follows (ascending):

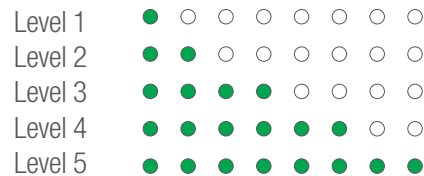

### KEY LOCK FUNCTION

Press the key for approx. 2 seconds. This will cause the status display to flash; when it is permanently green, the keys are locked. To unlock the system, press the key for 2 seconds again and wait until the status LED goes off. The keys are then ready for use again.

### CLEANING

When the keys are locked, you can clean the glass surface with normal cleaning and disinfecting agents. The chemical resistance of the glass surface may vary depending on the concentration of the solution and the particular environmental conditions. We therefore recommend that you carefully check your cleaning and disinfecting agents to see how they affect glass surfaces.

### INDIVIDUAL MODIFICATIONS

- Adding a Logo/Brand (1-4 colours)
- New country layout
- Individual GUI design
- Reducing the keyboard cable length
- Changing of the keytable (HID-Standard)