# Pro**Labs**

## Q28-100GP4-BXU2733-10-I-C-C

Cisco<sup>®</sup> Compatible TAA 100GBase-BX PAM4 QSFP28 Transceiver Single Lambda (SMF, 1271nmTx/1331nmRx, 10km w/FEC, LC, DOM, -40 to 85C)

#### Features:

- Compliant with 100G Lambda MSA 100G-LR Specifications
- Compliant with SFF-8636
- Single 3.3V Power Supply
- Single-mode Fiber
- Bidi LC Connectors
- Industrial Temperature -40 to 85 Celsius
- Hot Pluggable
- Metal with Lower EMI
- Excellent ESD Protection
- RoHS Compliant and Lead Free



#### **Applications:**

- 100GBase Ethernet
- Datacenter

## **Product Description**

This Cisco<sup>®</sup> QSFP28 transceiver provides 100GBase-BX throughput up to 10km over single-mode fiber (SMF) using a wavelength of 1271nmTx/1331nmRx via an LC connector. It is guaranteed to be 100% compatible with the equivalent Cisco<sup>®</sup> transceiver. This easy to install, hot swappable transceiver has been programmed, uniquely serialized and data-traffic and application tested to ensure that it will initialize and perform identically. Digital optical monitoring (DOM) support is also present to allow access to real-time operating parameters. This transceiver is Trade Agreements Act (TAA) compliant. We stand behind the quality of our products and proudly offer a limited lifetime warranty.

ProLabs' transceivers are RoHS compliant and lead-free.

TAA refers to the Trade Agreements Act (19 U.S.C. & 2501-2581), which is intended to foster fair and open international trade. TAA requires that the U.S. Government may acquire only "U.S. – made or designated country end products."



Rev. 080923

# Absolute Maximum Ratings

Parameter	Symbol	Min.	Тур.	Max.	Unit	Notes
Maximum Supply Voltage	Vcc	0		3.6	V	
Data Input Voltage		-0.3		3.6	V	
Control Input Voltage		-0.3		4	V	
Storage Temperature	Tstg	-40		85	°C	
Operating Case Temperature	Тс	0		70	°C	
Relative Humidity	RH	5		85	%	
Data Rate	BR		53.125		GBd	
Bit Error Rate	BER			2.4x10 <sup>-4</sup>		1
Supported Link Length on 9/125um SMF, 53.125 GBd	L		10		km	2

#### Notes:

- 1. Tested with a PRBS31Q test pattern for 53.125 GBd operation.
- 2. Distances are based on FC-PI-6 Rev. 3.1 and IEEE 802.3 standards, with FEC.

## **Electrical Characteristics**

Parameter	Symbol	Min.	Тур.	Max.	Unit	Notes	
Power Supply Voltage	Vcc	3.135	3.3	3.465	V		
Module Supply Current	lcc			1212	mA		
Power Dissipation	P <sub>DISS</sub>			4000	mW		
Transmitter							
Differential Data Input Swing	VIN, p-p	90	100	110	mVp-p		
Differential Input Impedance	ZIN	90	100	110	Ω		
Receiver							
Differential Data Output Swing	VOUT, p-p	300		900	mVp-p		
Differential Output Impedance	ZOUT	90	100	110	Ω		

# **Optical Characteristics**

Parameter	Symbol	Min.	Тур.	Max.	Unit	Notes	
Transmitter							
Center Wavelength	λC	1264.5	1271	1277.5	nm		
Extinction Ratio	ER	3.5			dB		
Launch Optical Power (Average)	Ро	-1.4		4.5	dBm	1	
Launch Optical Power (OMA)	Poma	0.7		4.7	dBm		
Transmitter and dispersion penalty eye closure for PAM4	TDECQ			3.4	dB		
RIN17.1OMA (max)	RIN			-136	dB/Hz		
Optical Return Loss Tolerance	ORLT			15.6	dB		
Pout @TX-Disable Asserted	Poff			-30	dBm		
Receiver							
Center Wavelength	λC	1324.5	1331	1337.5	nm		
Receiver Sensitivity (OMA)	RxSENS			-6.1	dBm	2	
Receiver Overload (Pavg)	POL	4.5			dBm		
Receiver reflectance				-26	dB		
LOS De-Assert	LOSD			-12	dBm		
LOS Assert	LOSA	-18			dBm		
LOS Hysteresis		0.5			dB		

#### Notes:

- 1. Class 1 Laser Safety per FDA/CDRH and EN (IEC) 60825 regulations.
- 2. Measured with PRBS31Q test pattern, 53.125GBd, BER<2.4×10<sup>-4</sup>.

# **Pin Descriptions**


Pin	Logic	Symbol	Name/Descriptions	Notes
1		GND	Module Ground.	1
2	CML-I	Tx2-	Transmitter Inverted Data Input.	
3	CML-I	Tx2+	Transmitter Non-Inverted Data Output.	
4		GND	Module Ground.	1
5	CML-I	Tx4-	Transmitter Inverted Data Input.	
6	CML-I	Tx4+	Transmitter Non-Inverted Data Output.	
7		GND	Module Ground.	1
8	LVTLL-I	ModSelL	Module Select.	
9	LVTLL-I	ResetL	Module Reset.	
10		VccRx	+3.3V Receiver Power Supply.	2
11	LVCMOS-I/O	SCL	2-Wire Serial Interface Clock.	
12	LVCMOS-I/O	SDA	2-Wire Serial Interface Data.	
13		GND	Module Ground.	
14	CML-O	Rx3+	Receiver Non-Inverted Data Output.	
15	CML-O	Rx3-	Receiver Inverted Data Output.	
16		GND	Module Ground.	1
17	CML-O	Rx1+	Receiver Non-Inverted Data Output.	
18	CML-O	Rx1-	Receiver Inverted Data Output.	
19		GND	Module Ground.	1
20		GND	Module Ground.	1
21	CML-O	Rx2-	Receiver Inverted Data Output.	
22	CML-O	Rx2+	Receiver Non-Inverted Data Output.	
23		GND	Module Ground.	1
24	CML-O	Rx4-	Receiver Inverted Data Output.	1
25	CML-O	Rx4+	Receiver Non-Inverted Data Output.	
26		GND	Module Ground.	1
27	LVTTL-O	ModPrsL	Module Present.	
28	LVTTL-O	IntL	Interrupt.	
29		VccTx	+3.3V Transmitter Power Supply.	2
30		Vcc1	+3.3V Power Supply.	2
31	LVTTL-I	LPMode	Low-Power Mode.	
32		GND	Module Ground.	1
33	CML-I	Tx3+	Transmitter Non-Inverted Data Input.	
34	CML-I	Тх3-	Transmitter Inverted Data Output.	
35		GND	Module Ground.	1

36	CML-I	Tx1+	Transmitter Non-Inverted Data Input.	
37	CML-I	Tx1-	Transmitter Inverted Data Output.	
38		GND	Module Ground.	1

### Notes:


- GND is the symbol for signal and supply (power) common for the QSFP28 module. All are common within the QSFP28 module, and all module voltages are referenced to this potential unless otherwise noted. Connect these directly to the host board signal-common ground plane.
- VccRx, Vcc1, and VccTx are the receiver and transmitter power supplies and shall be applied concurrently. Recommended host board power supply filtering is shown below. VccRx, Vcc1, and VccTx may be internally connected within the QSFP28 transceiver module in any combination. The connector pins are each rated for a maximum current of 1000mA.

## **Electrical Pin-Out Details**

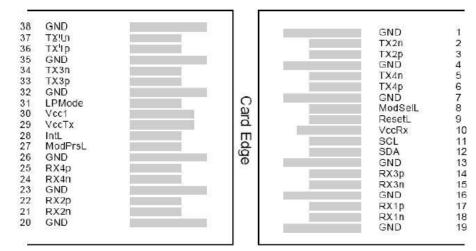


Top Side Viewed from Top Bottom Side Viewed from Bottom

# **Block Diagram**

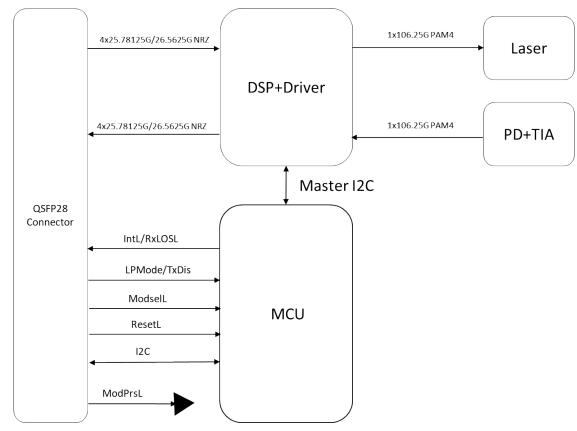



#### **Mechanical Specifications**

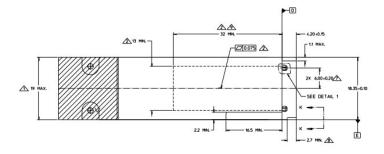



LL NOCATED DRENGONS DEFINE EN ANCED SECTON OF TRANSCEIVER THAT EXTENSE OUTSIDE OF CASE TO ACCOMODATE HATING PLUG AND ACTUATOR HECHANGH ALTUATOR HECHANGH STRATED SAMPLES FOR NOCATED LENGTH AND A MIN MOTH OF 19M -SURFACE DIS TERMINLY CONDUCTIVE AND ACTED SAMPLES TO LOUGH DOUCTIVE FOR COMPLETOR TO CHASE GROUND AD MOLTED DEHENSION APPLIES TO THE LOCATION OF THE EDGE OF THE MOLATED DATENSION TO ANCULATE DATENSION AD MOLTED DEHENSION TO ANCULATE DATENSION APPLIES TO THE LOCATION OF THE EDGE OF THE MOLATED DEHENSION TO ANCULATE BALL TRAVEL AD MOLATED DEHENSION TO ANCULATE BALL TRAVEL AD MOLATED DEHENSION TA PHILID BALL TRAVEL AD EALTURE MAY BE LONGET THAN SHOWN. AD HOMEN WATTAGE MODULES MAY REQUIRE ADDITIONAL SPACE FOR COLUMG.


8.5

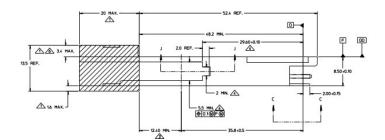


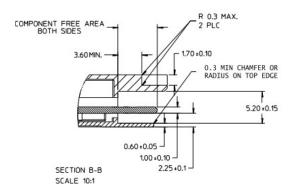




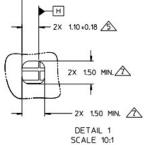



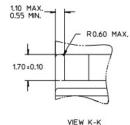

SCALE 10:1

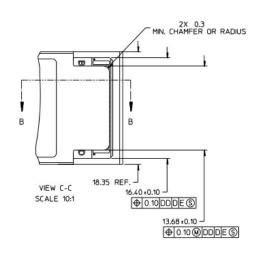

#### **About ProLabs**

Our experience comes as standard; for over 15 years ProLabs has delivered optical connectivity solutions that give our customers freedom and choice through our ability to provide seamless interoperability. At the heart of our company is the ability to provide state-of-the-art optical transport and connectivity solutions that are compatible with over 90 optical switching and transport platforms.

#### **Complete Portfolio of Network Solutions**

ProLabs is focused on innovations in optical transport and connectivity. The combination of our knowledge of optics and networking equipment enables ProLabs to be your single source for optical transport and connectivity solutions from 100Mb to 400G while providing innovative solutions that increase network efficiency. We provide the optical connectivity expertise that is compatible with and enhances your switching and transport equipment.

## **Trusted Partner**

Customer service is our number one value. ProLabs has invested in people, labs and manufacturing capacity to ensure that you get immediate answers to your questions and compatible product when needed. With Engineering and Manufacturing offices in the U.K. and U.S. augmented by field offices throughout the U.S., U.K. and Asia, ProLabs is able to be our customers best advocate 24 hours a day.



Contact Information ProLabs US Email: sales@prolabs.com Telephone: 952-852-0252

ProLabs UK

Email: salessupport@prolabs.com Telephone: +44 1285 719 600